



Installation Instructions for NPR 638 Access Rail Wall Mount

Step 1: Locate Studs and Screw in SU Mounts

- SU Mounts to be positioned with teeth facing UP
- ALL FOUR screws to be drilled into the same stud
- Both SU Mounts to be measured with level device
- Confirm that screw heads are flush or recessed into countersink
 - Access Rail will not slide onto mounts if screws are sticking out into the space between teeth

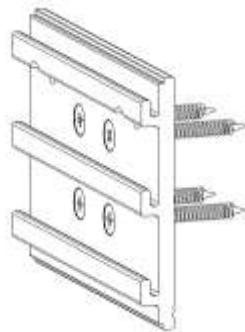


Screw Heads Flush to Surface

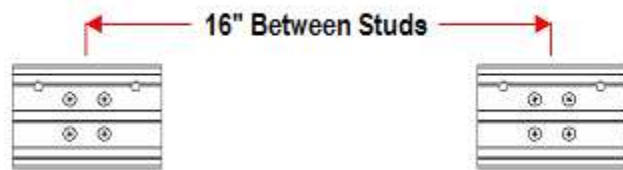

SU Mounts Level on Wall

Step 2: Attach Access Rail


- Mount the Access Rail onto the SU Mounts from the front, confirm that Access Rail teeth are interlocked with SU Mount teeth
- Slide the Access Rail so that the middle of the Rail is approximately located in the middle of the space between both SU Mounts

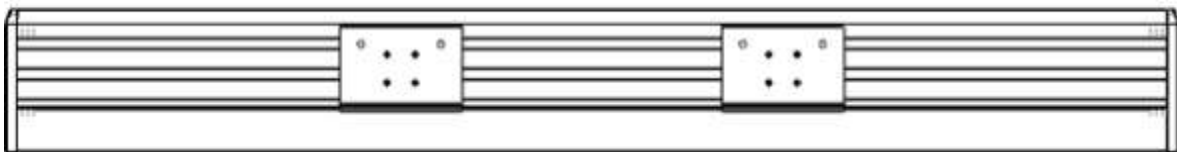



Access Rail Mounted on SU Mounts

Step 3: Attach Thumb Screw Bracket

- Insert Thumb Screw into Corner Bracket from the bottom
- Position Oval Nut on top of the Thumb Screw, thread nut only a few revolutions so that nut stays on the top of Thumb Screw
- Line up top edge of Corner Bracket so that it contacts the bottom edge of the SU Mount
 - You will be able to feel the contact made between the two parts
- Carefully turn the thumb screw in the clockwise direction
- After several revolutions you will feel the Oval Nut begin to tighten against the bottom flange of the Access Rail
- If the Oval Nut slips then repeat this step until there is a secure fit and you can pull down on the Thumb Screw Bracket without it falling off

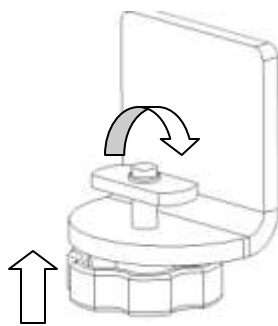

Assemble Thumb Screw Bracket

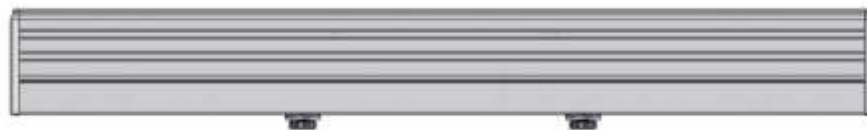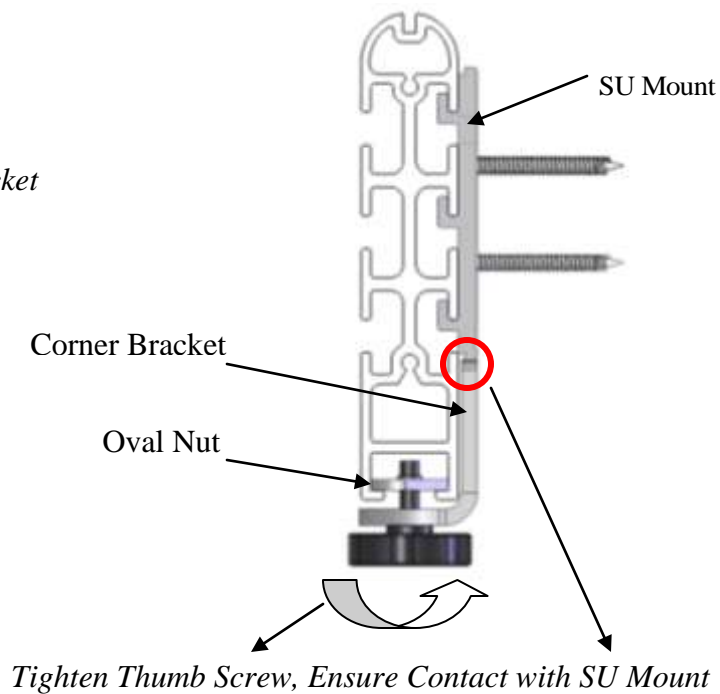

Final Product